

Assembly instructions Changing table Elise freestanding with and without sink.

(Art.nr 119364, 119365, 35443, 35444 samt 35447)

- The changing table must be mounted on a free surface without nearby fixed obstacles on the walls.
- The floor must be stable and leveled.
- Position the changing table so that there is no risk of squeezing adjacent objects. It is the installer and the user's responsibility to position the changing table so that there is no risk of squeezing. Remember that you as a user are responsible for ensuring that no one is harmed.
- The distance to adjacent objects should be at least 50mm to avoid the risk of squeezing.
- The adjustable feet on the stand are there to make it easier to get the changing table in balance (horizontal position).



- **Electrical connection must be made via a standard 230V socket with timer. This equipment must not be permanently connected to the mains.**
- **Water and drains must be connected by a qualified installer.**



- **The table must not be loaded with more than a maximum of 40kg in the stationary position and 20kg in the driving position.**



- **The changing table raising and lowering function must absolutely not be used if the mounted ladder is in the extended position.**



- **If any part of the changing table is damaged or if there is a suspicion of damage, take the changing table out of operation immediately. Disconnect the power supply and contact your supplier.**

Use

The table is intended for care, laundry, diaper changes, etc. of small children in kindergartens, preschools and similar functions.



- **All other use is prohibited and falls outside the product / supplier's product liability.**



Assembly

The changing table is delivered pre-assembled and the only installation required is the installation of faucet, plumbing and electricity.


1. Place the changing table in its intended place. Adjust the changing table so that it is level with the help of the adjustable feet's.




2. Connect the hand control to the designated socket in the control box.




3. Connect the 220V cable to the wall socket (the length of the power cord is 3.7m).
4. Install the faucet according to the enclosed installation instructions.

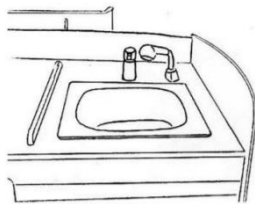

5. Water and sewage shall be connected by a qualified installer.
Water and sewage are drawn according to this sketch out through the hole located on each side of the table. (The length of the drain hose is 1.8 m)

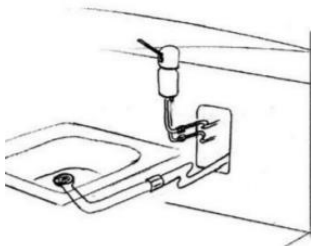

6. Assemble baskets and other accessories.

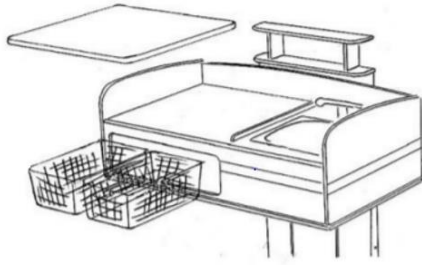

Operation

Hand control with up & down buttons illustrated with arrows regulates the movement of the table.



Raise button.

Press the up button until the table reaches the desired position.



Button for lowering.

Press the down button until the table reaches the desired position.

Reset

If the raising and lowering function of the changing table for some reason stops working. Try unplugging the power cord and leaving the changing table without power for a few minutes, then plug it in again.

If this does not work, contact your supplier.