

Assembly instructions Changing table Kajsa with and without sink.

(Item.nr 34220, 34221, 34222 and 34227)

- The changing table must be placed on a stable and flat surface.
- Position the changing table so that there is no risk of squeezing adjacent objects. It is the installer and the user's responsibility to position the changing table so that there is no risk of squeezing. Remember that you as a user are responsible for ensuring that no one is harmed.
- The distance to adjacent objects should be at least 50mm to avoid the risk of squeezing.
- The adjustable feet on the stand are there to make it easier to get the changing table in balance (horizontal position).



- **Water and drains must be connected by a qualified installer.**



- **If any part of the changing table is damaged or if there is a suspicion of damage, take the changing table out of operation immediately and contact your supplier.**

Use

The table is intended for care, laundry, diaper changes, etc. of small children in kindergartens, preschools and similar functions.



- **All other use is prohibited and falls outside the product / supplier's product liability.**



Assembly

The changing table is delivered pre-assembled and the only installation required is the installation of faucet and plumbing.

1. Place the changing table in its intended place. Adjust the changing table so that it is level with the help of the adjustable feet's.



2. Assemble the washing part using the supplied bolts.
2 pcs M8x30 for 34221 and 34222.
4 pcs M8x30 for 34227.



3. Install the faucet according to the enclosed installation instructions.
Water and sewage shall be connected by a qualified installer.
(The length of the drain hose is 1.8 m)
4. Assemble baskets and other accessories.