


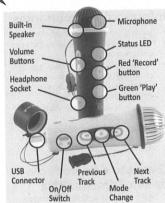

Important Information

- Please retain these instructions for future reference as they contain important information.
- Do not allow your Easi-Speak to come into contact with water or other liquids.
- In the event of an electro-static discharge, your Easi Speak may malfunction. In this event, please switch it off and then back on to reset it.
- · Easi-Speak is available in different colours.



Recording and Playback

- Switch on the Easi-Speak by sliding the On-Off switch until the Status LED lights orange (steady or flashing), indicating it is waiting in standby.
- Press and release the red record button and the status LED will change to red indicating it is recording.
- Speak or sing clearly into the top of the microphone about 15cm to 30cm away for at least 2 seconds.
- When you are done, press the red record button again to stop the recording, this will then save your recording as the last track. The status LED will again be orange (steady or flashing).
- Press the green play button to play your track. The status LED will light green while the track is playing.
- When the track is finished, Easi-Speak will return to standby and the Status LED will be orange.

Replacing the battery

- 1. Before replacing the battery ensure that the product is switched off.
- 2. Using the appropriate tool remove the retaining screw to gain access to the battery compartment.
- 3. Replace the battery(s) with the correct battery(s).
- 4. Insert the battery(s) with the correct polarity see image below for reference.
- 5. Assembly is the reverse of removal.

Easi-Speak® is a registered trademark of the TTS Group LTD. You can download the full instructions from the following URL: www.tts-group.co.uk/Easi-Speak_usermanual

TTS Group Ltd., Park Lane Business Park, Kirkby-in-Ashfield, Nottinghamshire, UK NG17 9GU Freephone: 0800 318686 Freefax: 0800 137525

Product Code: ETTMICY/ETTMICB/EL00308





