 


CHATTER TRACKER® - Instructions **GB**

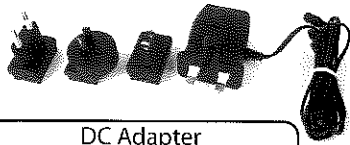

DC Adapter
Input 100-240 VAC 50-60 Hz
Output 9VDC 500mA

Red light counter with reset button


Decibel levels selector

Decibel adjustable button

Noise meter/speakers

Power on/off

Sound on/off

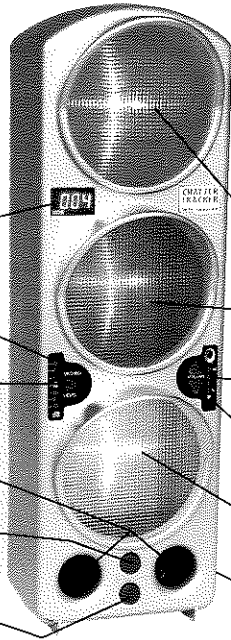

Sound option buttons on back of unit. Press MODE button to toggle between siren, "Quiet Please" in English, German, French, Spanish or own recording.

Red light

Amber light (flashing)


Volume Control

Volume/power indicator

Green light

Plug socket for adapter

To record your own 15 second personal message, press and hold REC button and speak into the MIC after you hear the first beep sound. Your recording will cease when either you release the REC button or you hear a second BEEP BEEP sound after 15 seconds.

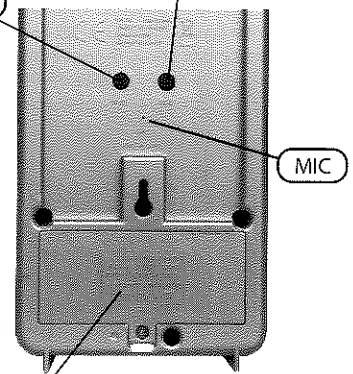

Optional battery compartment for mobile use. (Requires 6 AA batteries - not included)

Chatter Tracker® is operated manually and can be set on a table or hung on a wall, in either case:

- Choose a location away from excess heat, humidity and water or any liquid.
- Use only the AC adapter provided in the package.
- To prevent shock hazard, always plug the AC adapter into the unit before plugging unit into electrical outlet.
- Route the power cord away from heavy traffic areas or anywhere that cord might be pinched, rubbed or worn.
- Where your unit is placed or facing makes a difference. e.g. Do not place it near a door that constantly opens and closes, or in front of a classroom where direct instruction will take place (the unit will pick up the closest noise). It is suggested you try "Chatter Tracker®" in different locations within your room to see which location best tracks the noise level.
- Select the appropriate level of noise for any given situation. The suggested decibel level setting for a classroom is 70/80 decibel. Each time you switch on the unit or change decibel levels, the unit will automatically turn red for 3 seconds and then go green.
- The green light stays lit until noise goes above set level (determined by user). The green light goes off and flashing amber light comes on as a warning. When sound level reaches 15 decibel above the set level, the red light and siren sound comes on. You can turn the siren off using the On/Off button located on the front of the unit.
- Mode button has an option of siren only, "quiet please" in English, German, French, Spanish. Also record your own 15 second personal message (toggle by pressing the MODE button on back of unit).
 - MODE 1: Siren only
 - MODE 2: Voice only "Quiet Please" English
 - MODE 3: Voice only "Quiet Please" German
 - MODE 4: Voice only "Quiet Please" French
 - MODE 5: Voice only "Quiet Please" Spanish
 - MODE 6: Record your own sound
- To record your own 15 second personal message, press and hold REC button and speak into the MIC after you hear the first beep sound. Your recording will cease when either you release the REC button or you hear a second BEEP BEEP sound after 15 seconds.

Trouble shooting your Chatter Tracker®

IF	THEN
Unit does not work or lights don't work properly	Make sure the adapter is plugged into the unit and the power cable is plugged all the way into the power outlet. If using batteries, check battery position for correct polarity or replace with a brand new set of 6 "AA" batteries.
The siren does not work	Make sure you are not in the non siren mode by pressing the MODE button to toggle among the various modes.
The unit keeps cycling through the green, amber and red light	Any time you change the decibel level or turn the unit on, this will happen.
The unit is not functioning	The Chatter Tracker® is designed to be used with the included DC adapter (input: 100-240VAC 50-60HZ 300mA, Output: 9VDC 500mA). Using incompatible adapters may result in damage to the unit.

Please contact our office for details of distributors in your area

ED.UK.8 Worldwide Ltd -

Wilson Lodge, Great Whittington, Newcastle Upon Tyne, NE19 2HP, UK, Tel/Fax: 00 44 (0) 1434 672336 enquiries@eduk8worldwide.co.uk