



Premium Talk-Time Cards

Record and play back 60 seconds
of high quality audio

Warranty & Support

This product is provided with a one year warranty for problems found during normal usage. Mistreating the Premium Talk-Time Cards or opening the unit will invalidate this warranty. Any data stored on the unit and any consequential loss is not covered by this warranty. The battery is not user replaceable.

Technical Support

Please visit www.tts-group.co.uk for the latest product information.
Email feedback@tts-group.co.uk for technical support.

TTS Group Ltd.
Park Lane Business Park
Kirkby-in-Ashfield
Nottinghamshire,
NG17 9GU, UK.
Freephone: 0800 318686 Freefax: 0800 137525

WARNING: Do not dispose of this product in household waste. Hand it over to a collection point for recycling electronic appliances.

 
Not suitable for children under 36 months due to small parts – choking hazard. Made in China, on behalf of the TTS Group Ltd.

TTS Product Code:

EL00551 A6

IT01154 A5

IT01150 A4



TTS is proud to be part of **RM** plc



USER GUIDE

www.tts-shopping.com



Premium Talk-Time Cards

Important Information


Please retain the information in this User Guide for future reference.
 Please read all instructions fully before using.
 To clean, wipe the cards with a clean damp cloth.
 Do not allow the cards to come into contact water or other liquids.
 Keep the cards away from direct sunlight and heat when not in use..
 In the event of an electrostatic discharge, your card may malfunction. In this case, please switch it off and then back on again to reset it.
 Non-rechargeable batteries are not to be recharged.
 Rechargeable batteries are only to be charged by an adult.
 Batteries are to be inserted with the correct polarity.
 The supply terminals are not to be short-circuited.
 Only batteries of equal size and type should be used
 Talk-Time Premium cards can record and play back 60s of high quality audio and are magnetic so they can easily be mounted for display purposes. The white surface is suitable for use with dry wipe pens. There are three sizes of Premium Talk-Time Cards:

EL00551 A6 IT01154 A5 IT01150 A4

Changing the batteries

The Premium Talk-Time cards all require 3 x AG10 alkaline batteries (supplied). Undo the screw to release the battery hatch. Carefully slide the battery hatch out and using a small screwdriver, lift the exhausted batteries from the tray. Insert the new batteries carefully, making sure they are fitted with the correct polarity. Re-fit the battery hatch and re-tighten the screw.

Know your Premium Talk-Time card

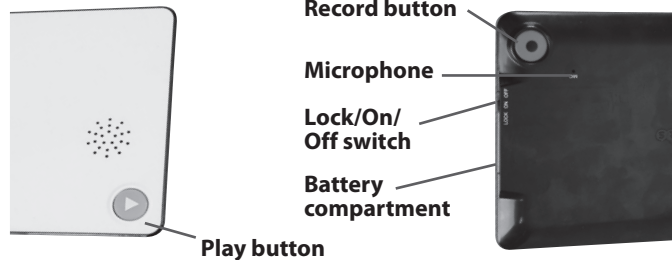

Using Your Premium Talk-Time card

Recording

The Premium Talk-Time cards can record a maximum of 60 seconds of audio. To make a recording, first move the slide switch to the "On" position. Press the red record button once and the card will "Beep" to show it is now recording. Speak into the microphone and when you want to finish recording, just press the red record button again. You will

hear two "beeps" to indicate that the recording has finished. To record another message, just press the record button again to record over the previous message.

If you want to protect the recording, just move the slide switch to the "Lock" position. The card will still play back, but recording is disabled.

Playback

To Play back a recorded message, the slide switch must be in either the "On" or "Lock" position. Pressing the green "Play" button will play back the recorded message. Pressing the green "Play" button again will stop the playback.

Please switch the cards off when not in use to conserve the batteries.

Specifications

Record time	60 seconds
Battery type	3 X AG10 (User replaceable)
Battery Life	500 playback or recordings (typ)

Problem Solution

Card will not record	Ensure the slide switch is set to "On"
Card will not Play back	Ensure the slide switch is set to "on" or "Lock"
Audio is quiet or distorted	Sound is too far from, or too close to the microphone. Batteries need replacing