



Monteringsanvisning Påklädningsbänk





A



A. Fot 6 st



B. M8x40 6 st




C. M6x40 8 st




D. Mutter 8 st


1.

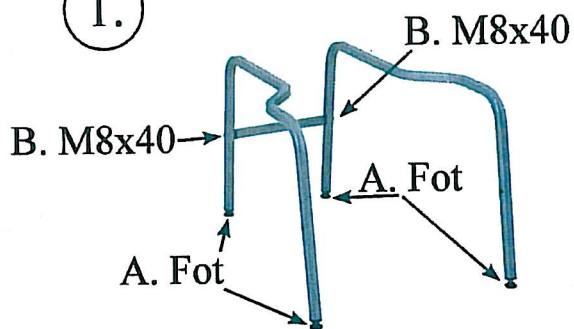

2.

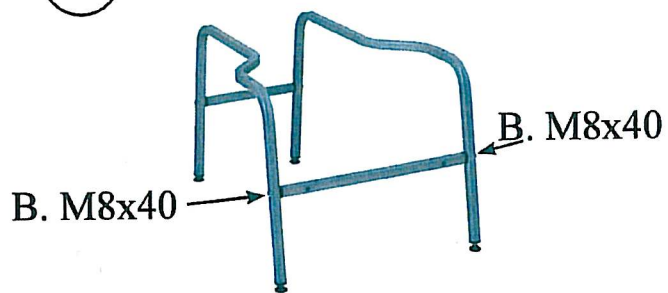

3.

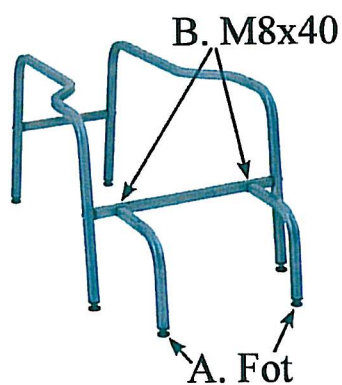

4.



5.

