



169248 RABO BOX with DOORS

1500x600x1120

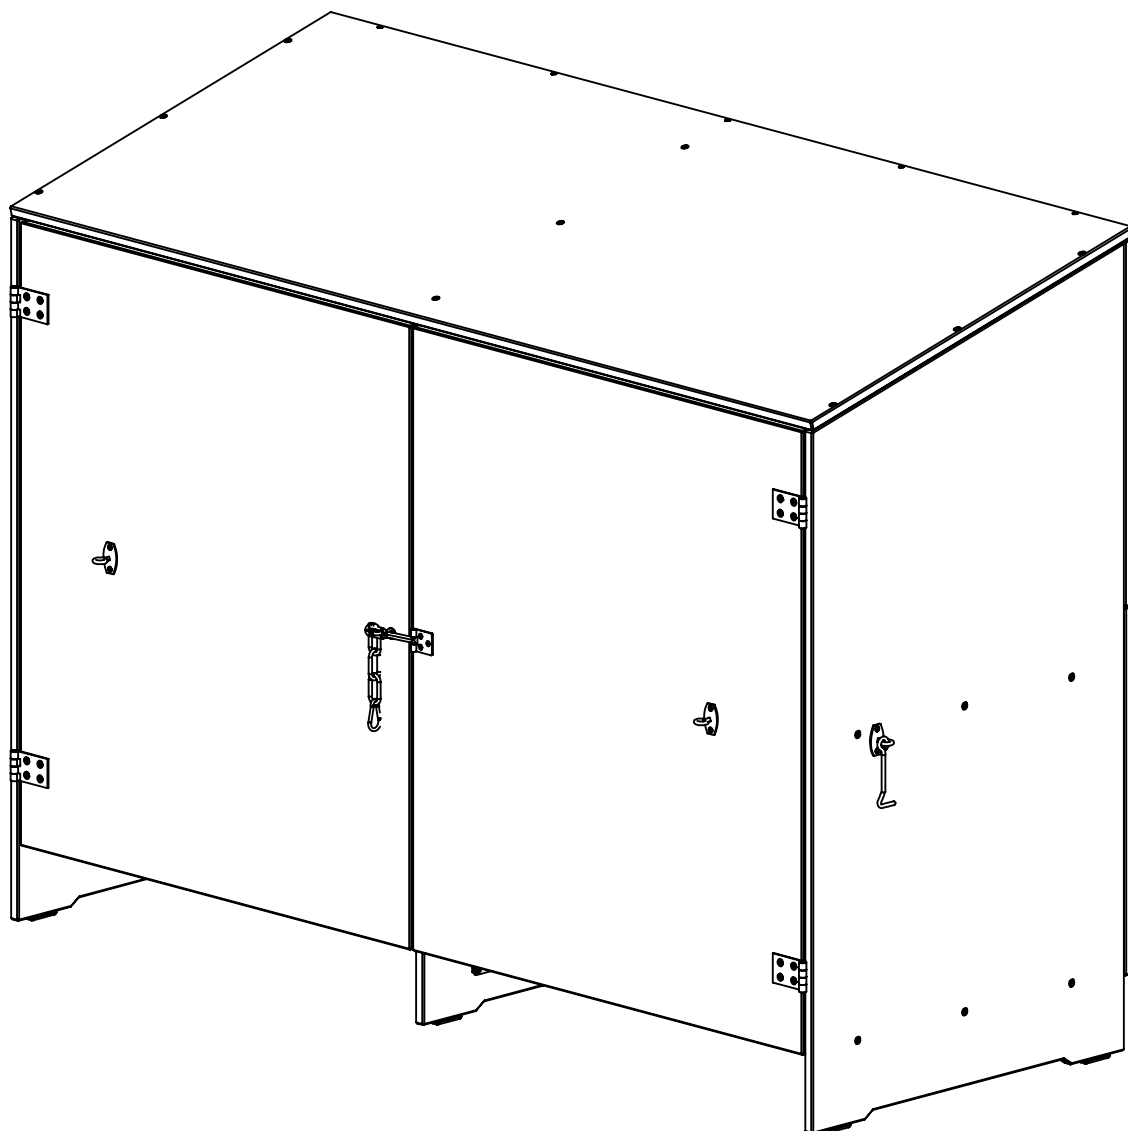


Fittings list:

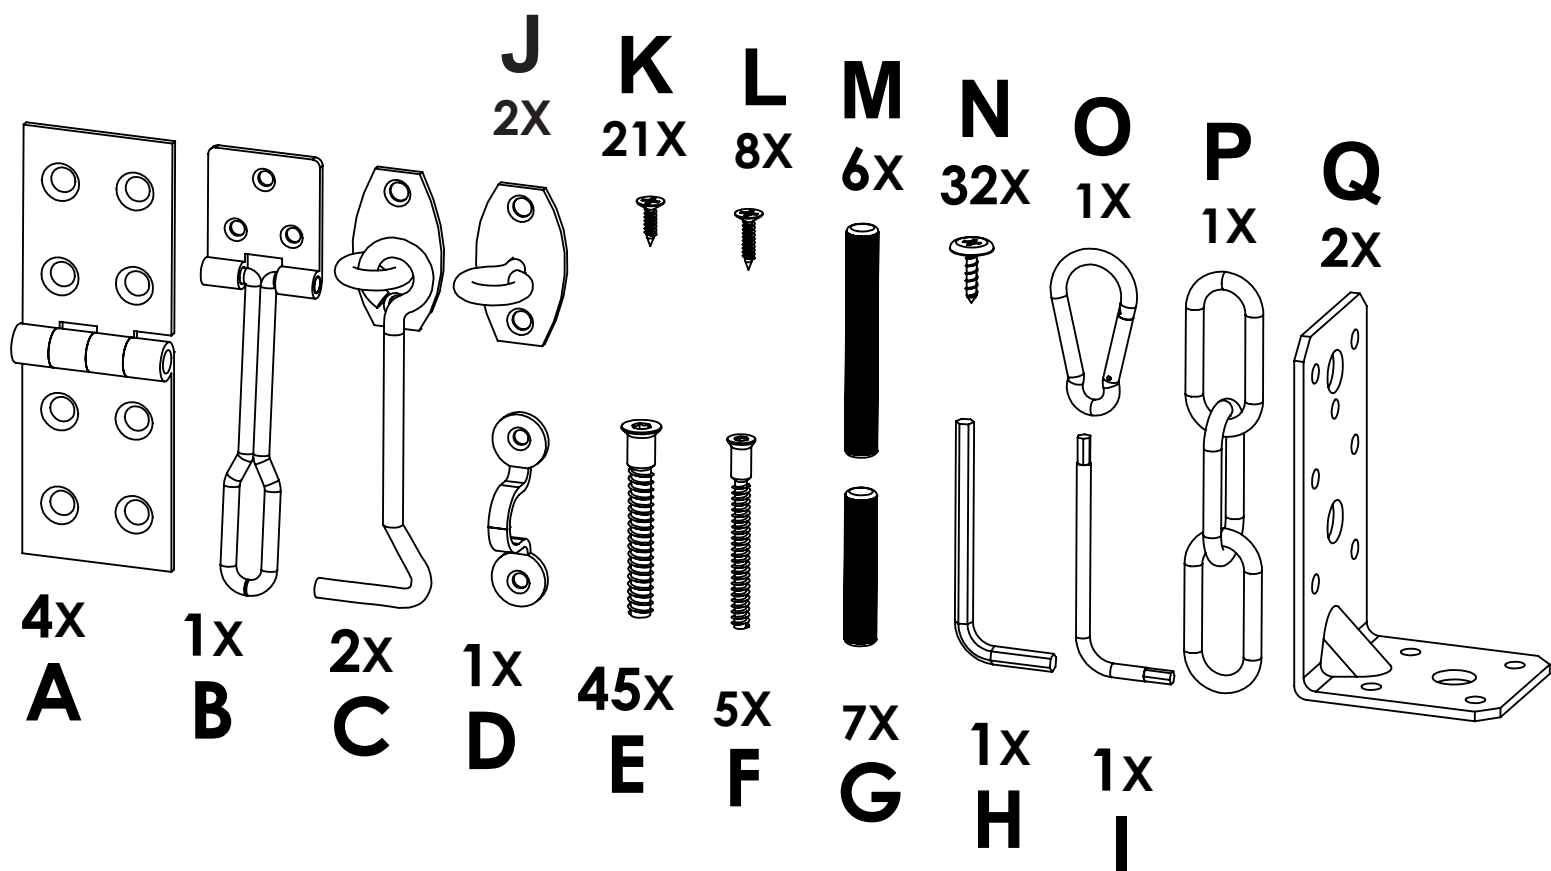


Assemble the parts in the following order:

1. Part 1 + Part 2 + Part 3 + Part 4
2. Part 5 + Part 6 + Part 7
3. Part 8 + Part 9
4. Part 10
5. Part 11 + Part 12

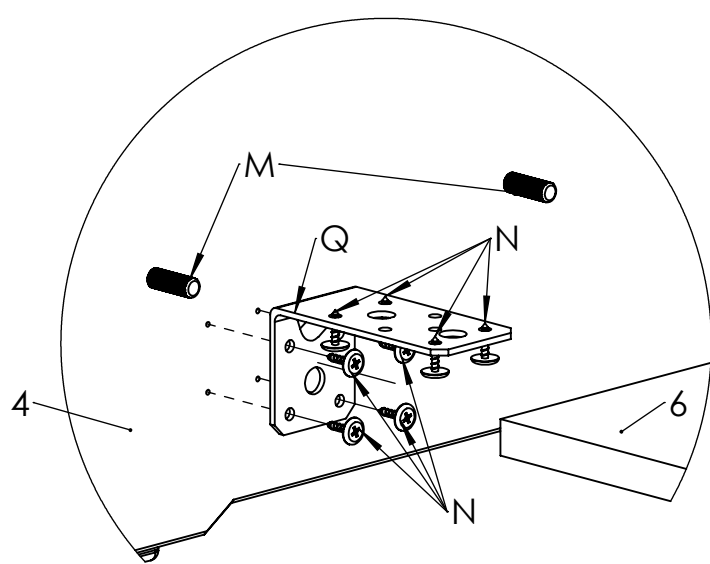


DETAIL B

SCALE 1 : 3

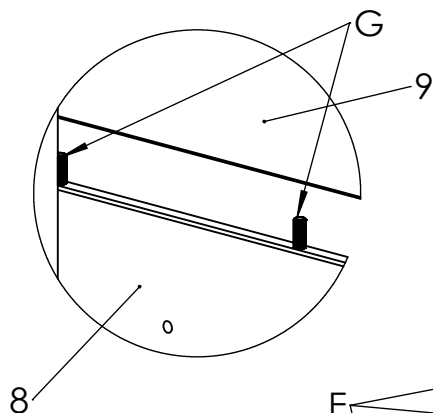

DETAIL C

SCALE 1 : 5

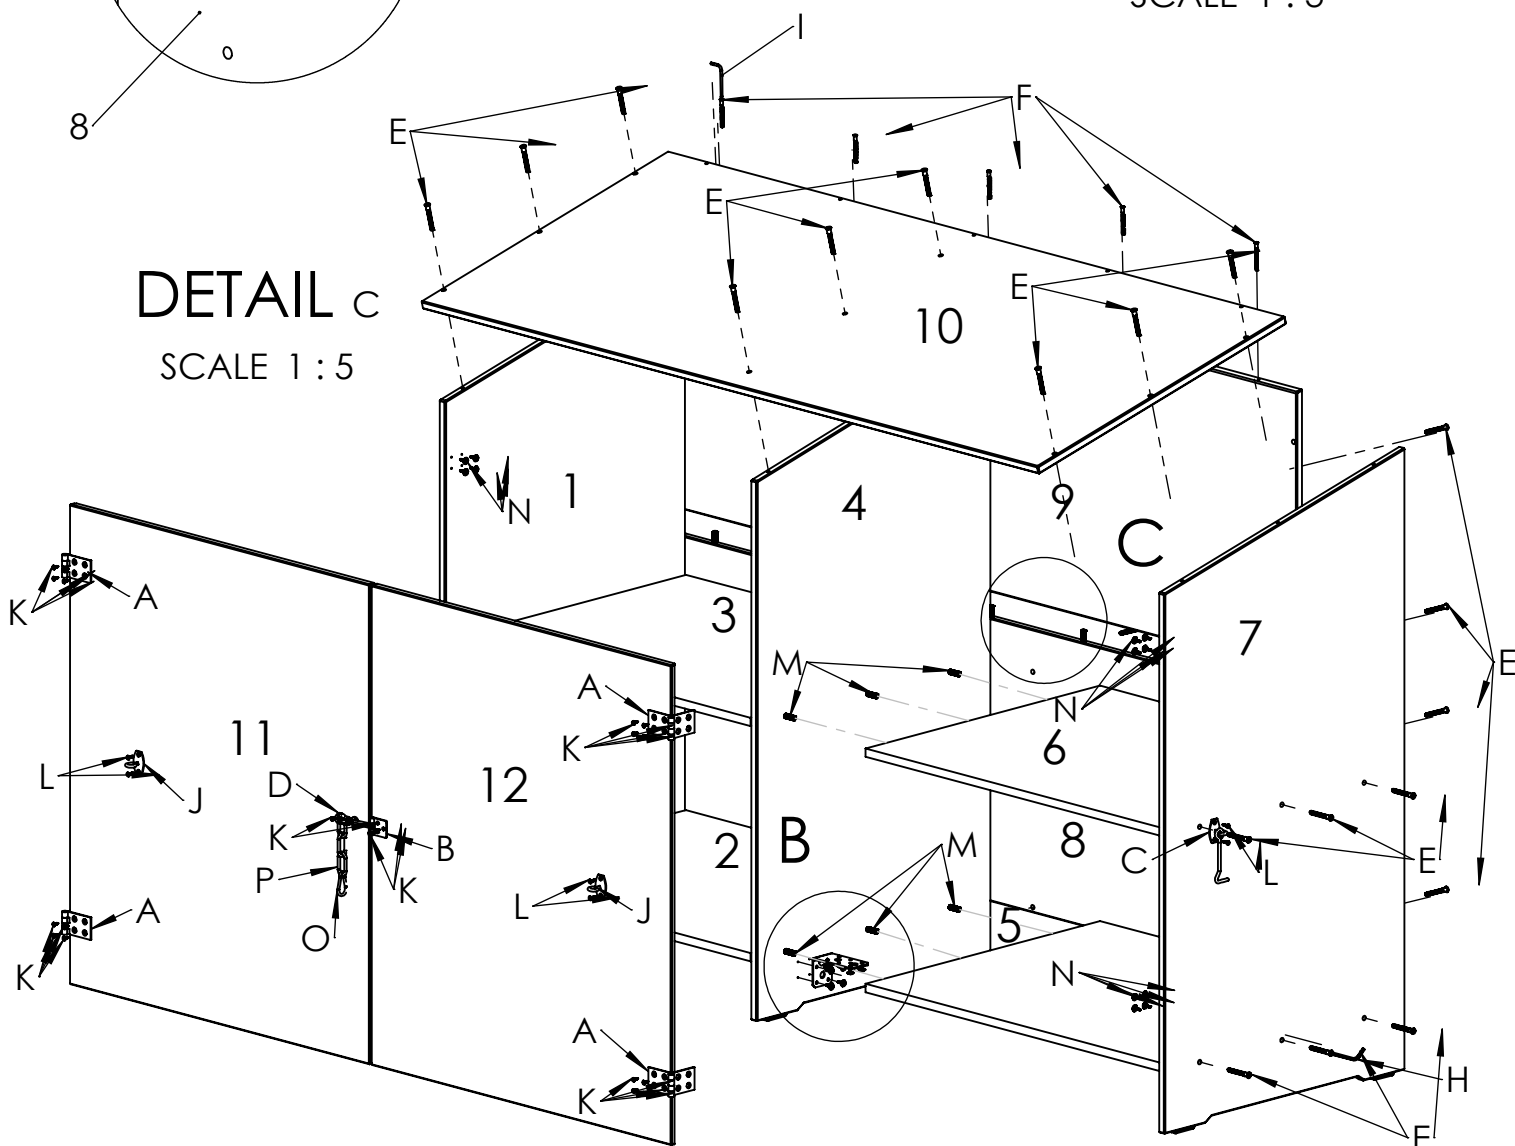

IMPORTANT:

Do not fully tighten any screws **E** and **F** until all parts have been assembled.
After completing the assembly, tighten all screws securely.